CLUTCH JUDDER AND NOISES MORRIS 8 CARS 1934 to 1938

(See also 'Clutch Assembly and Balance' Article).

This is based on my own experiences with my Series II saloon, both at restoration stage and on the road over 12,000 miles.

Clutch Judder

The following items are often the cause of clutch judder :-

- a) Excessive amounts of oil leaking from crankshaft rear scroll/seal and from gearbox shaft; some minor oil leakage is, however, to be expected and is permissible. If the linings are contaminated with oil it will judder on take up.
- b) Faulty, loose or perished front engine mountings.
- c) Corroded or weakened triangular chassis mounting brackets for front engine mountings.
- d) Faulty, loose or perished gearbox mountings.
- e) Loosened rivets holding gearbox mounting cradles to chassis cross-member.

Clutch Noises

The following can cause clutch noises :-

- a) A worn or damaged thrust block will screech as the pedal is depressed.
- b) An incorrectly adjusted clutch can produce a screech and/or engine-speed related knocking when the pedal is fully depressed.
- c) A loose flywheel will cause engine-speed related knocking.
- d) Not strictly clutch, but if the prop-shaft flange nuts and bolts are not tight, a sharp metallic click will be heard as the clutch is engaged and the car moves.
- e) If the wrong type of clutch has been fitted (usually recognised by an enclosed centre plate where you cannot see the cushioning coil springs) a scraping or engine-speed related knocking will be heard as the centre plate pressing contacts the flywheel, or the pressure plate cover contacts the bellhousing.
- f) A dry or damaged spigot bearing will produce an engine-speed related squeal as the drive is taken up.

Important Notes

Always fully tighten flywheel mounting set bolts to 42 lb/ft and secure them to each other with a loop of wire through the holes in the heads, twisting the ends together.

Ensure that you have the correct clutch; try to get a Borg and Beck clutch with the exposed centre plate springs. I know these to be satisfactory.

Always replace pressure plate, centre plate and release bearing as a complete set.

Should you have anything to add, or to constructively criticise, I would be only too pleased to hear from you.